

# EMB-RasPI-130x-Cape Datasheet

embit s.r.l.

Revision 1.2

# **Document information**

# **Versions & Revisions**

| Revision | Date       | Author                       | Comments        |  |
|----------|------------|------------------------------|-----------------|--|
| 0.1      | 2018-09-28 | Embit                        | Initial release |  |
| 1.0      | 2018-11-05 | Embit                        | Revision 1.0    |  |
| 1.1      | 2022-12-15 | Embit                        | Revision 1.1    |  |
| 1.2      | 2025-10-30 | Embit-DB Specification fixes |                 |  |
|          |            |                              |                 |  |
|          |            |                              |                 |  |

## **Index**

| 1 | Int | roductionroduction       | . 4 |
|---|-----|--------------------------|-----|
|   |     | Specifications           |     |
|   | 1.2 | Applications             | .4  |
| 2 |     | scription                |     |
|   |     | Block Diagram            |     |
|   |     | Hardware description     |     |
|   |     | Hardware Setup           |     |
| 3 | Cor | nnections่               | . 8 |
| _ |     | Pin Out Description      |     |
| 4 |     | ectrical Characteristics |     |
|   |     | Absolute Maximum Ratings |     |
|   | 4.2 | Operating Conditions     | . 9 |
| 5 |     | ferences 1               |     |
|   |     | sclaimer of liability 1  |     |
| • | 6 1 | Handling Precautions     | 10  |
|   |     | Limitations              |     |
|   |     | Disclaimer of Liability  |     |
|   |     | Trademarks               |     |

## 1 Introduction

The **EMB-RasPI-130x-Cape** is an extension board for both EMB-LR1302-mPCIe, specially designed for using the Raspberry PI allowing the user to create his own LoRa gateway. It comes with the mini PCI express connector for the EMB-LR1302-mPCIe, Raspberry PI connector, 2 LEDs and a switch controllable by Raspberry PI GPIOs. This product is designed especially for the Raspberry PI 3/4/5.

## 1.1 Specifications

Operating Voltage: +5V

Operating Temperature: -40°C to +85°C

Interfaces: mPCIe (SPI / I2C / UART / GPIOs)

• Dimensions: 85 x 56 x 1.6 mm

• Features: Easy integration with Raspberry PI 3/4/5

Part Number: EMB-RasPI-130x-Cape

## 1.2 Applications

The device can be used in several application where LoRaWAN gateway is needed, such as:


- Internet Of Things (IOT)
- Automated Meter Reading
- Smart Cities

- Home and Building Automation
- Wireless Alarm and Security System
- Machine to Machine (M2M)
- Industrial Monitoring and Control
- Long Range Irrigation System.

# 2 Description

## 2.1 Block Diagram

The **EMB-RasPI-130x-Cape** block diagram:

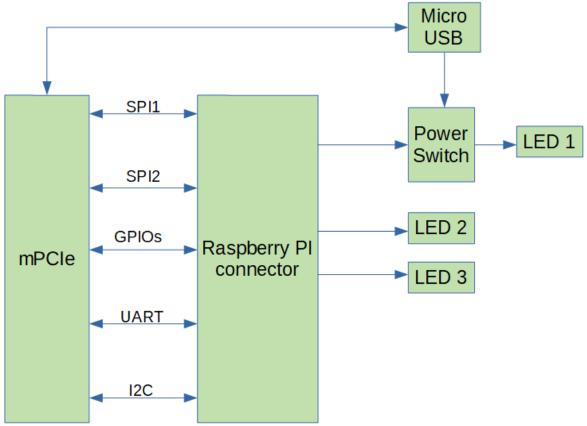

1.EMB-RasPI-130x-Cape Block Diagram.

## 2.2 Hardware description

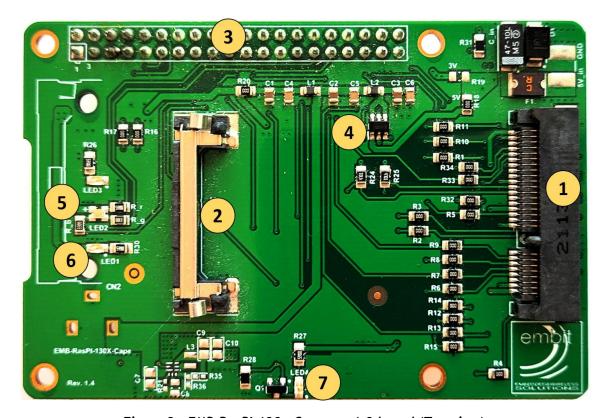


Figure 2: EMB-RasPI-130x-Cape rev.1.3 board (Top view).

#### 1. mPCIe Connector.

Connector for EMB-LR1302-mPCIe.

#### 2. mPCIe Latch.

Latch for the EMB-LR1302-mPCIe board.

#### 3. Raspberry PI Connector.

Connector for the Raspberry PI 3/4/5.

#### 4. Power Switch.

Switch to power on/off the EMB-LR1302-mPCIe board. It is controllable by Raspberry PI GPIO.

#### 5-6-7. LEDs.

Green (6) LED (power on indicator); yellow (7) and blue (8) LEDs controllable by two Raspberry PI GPIOs.

## 2.3 Hardware Setup

The hardware setup for creating the LoRa gateway is very simple. Just mount the EMB-LR1302-mPCIe into the mini PCI express connector and then mount the **EMB-RasPI-130x-Cape** onto the Raspberry PI. See picture below.



Figure 3.LoRa gateway with EMB-1302-mPCle + EMB-RasPl-130x-Cape + Raspberry Pi Board

# **3 Connections**

## 3.1 Pin Out Description

The table below gives the description of the pin out of the connector for Raspberry PI.

| Number | Pin Name | Туре                                   | Description                  |  |
|--------|----------|--|------------------------------|--|
| 1      | 3V3A     |  |                              |  |
| 2      | 5V0A     |  |                              |  |
| 3      | SDA      | OA Input/Output I2C Crypto Serial Data |                              |  |
| 4      | 5V0B     | Power                                  | +5V                          |  |
| 5      | SCL      | Output                                 | I2C Crypto Serial Clock      |  |
| 6      | GND_A    | Power (GND)                            | Ground                       |  |
| 7      | GPIO04   | Output                                 | SX1301 Reset Pin, active low |  |

| 8  | TXD      | Output      | GPS Serial Interface (TX) (for SX1301 only)           |  |
|----|----------|-------------|---|--|
| 9  | GND_B    | Power (GND) | Ground  |  |
| 10 | RXD      | Input       | GPS Serial Interface (RX) (for SX130 only)            |  |
| 11 | GPIO17   | Output      | Power Enable  |  |
| 12 | GPIO18   | Output      | GPS Reset pin, active low (for SX1301 only)           |  |
| 13 | GPIO27   | Output      | LED2  |  |
| 14 | GND_C    | Power (GND) | Ground  |  |
| 15 | GPIO22   | Output      | LED3  |  |
| 16 | GPIO23   | Output      | FPGA Configuration Reset, active low                  |  |
| 17 | 3V3B     | Power       | +3.3V   |  |
| 18 | GPIO24   | Input       | FPGA Configuration Done                               |  |
| 19 | SPI_MOSI | Input       | SX1301 SPI MOSI (for SX1301 only)                     |  |
| 20 | GND_D    | Power (GND) | Ground  |  |
| 21 | SPI_MISO | Output      | SX1301 SPI MISO (for SX1301 only)                     |  |
| 22 | GPIO25   | Input       | GPS PPS Input (for SX1301 or for external GPS module) |  |
| 23 | SPI_CLK  | Output      | SX1301 SPI Clock (for SX1301 only)                    |  |
| 24 | SPI_CE0  | Output      | SX1301 SPI Chip Select (for SX1301 only)              |  |
| 25 | GND_E    | Power (GND) | Ground  |  |
| 26 | SPI_CE1  | NC          | Not Connected   |  |
| 27 | ID_SD    | NC          | Not Connected   |  |
| 28 | ID_SC    | NC          | Not Connected   |  |
| 29 | GPIO05   | NC          | Not Connected   |  |
| 30 | GND_F    | Power (GND) | Ground  |  |
| 31 | GPIO06   | NC          | Not Connected   |  |
| 32 | GPIO12   | Input       | Packet Sent IRQ (for SX1308 only)                     |  |
| 33 | GPIO13   | Output      | STM32 BOOT0 pin (for SC1308 only)                     |  |
| 34 | GND_G    | Power (GND) |   |  |
| 35 | GPIO19   | Output      | FPGA SPI MISO   |  |
| 36 | GPIO16   | Output      | FPGA SPI Chip Select                                  |  |
| 37 | GPIO26   | Output      | STM32 Reset Pin, active low (for SX1308 only)         |  |
| 38 | GPIO20   | Input       | FPGA SPI MOSI   |  |
| 39 | GND_H    | Power (GND) | Ground  |  |
| 40 | GPIO21   | Output      | FPGA SPI Clock  |  |

Table 1: Raspberry PI connector Pin Out.

## 4 Electrical Characteristics

## 4.1 Absolute Maximum Ratings

| Parameter            | Value       | Unit |
|----------------------|-------------|------|
| Power Supply Voltage | +5.5        | Vdc  |
| Storage Temp. Range  | -50 to +150 | oC   |

Table 2: Absolute maximum ratings.

## 4.2 Operating Conditions

| Parameter                   | Min | Max  | Unit |
|-----------------------------|-----|------|------|
| Power Supply Voltage (Vcc)  | +5  | +5.5 | V    |
| Operating Temperature range | -40 | +85  | °C   |

Table 3: Operating Conditions.

## **5** References

Embit, EMB-LR1302-mPCIe datasheet, from www.embit.eu Raspberry PI specifications, from www.raspberrypi.org

## 6 Disclaimer of liability

The user must read carefully all the documentation available before using the product. In particular, care must be taken in order to comply with the regulations (e.g., power limits, duty cycle limits, etc.).

## 6.1 Handling Precautions



This product is an ESD sensitive device. Handling precautions should be carefully observed.

#### 6.2 Limitations

Every operations involving a modification on the internal components of the module will void the warranty.

### 6.3 Disclaimer of Liability

The information provided in this and other documents associated to the product might contain technical inaccuracies as well as typing errors. Regulations might also vary in time. Updates to these documents are performed periodically and the information provided in these manuals might change without notice. The user is required to ensure that the documentation is updated and the information contained is valid. Embit reserves the right to change any of the technical/functional specifications as well as to discontinue manufacture or support of any of its products without any written announcement.

#### 6.4 Trademarks

Embit is a registered trademark owned by Embit s.r.l.

All other trademarks, registered trademarks and product names are the sole proprietary of their respective owners.